


Manual

AMP
AHEAD Metronome Pad
Practice Drum Pad

I. WARNING

1. Do not disassemble or repair this unit by yourself.
2. Do not use strong detergents, abrasives or chemical solvents to clean this unit.
3. Do not strike the LCD screen display, it will damage or disable the electronics.
4. Remove batteries if not using the unit for a long period of time.
5. Please dispose of batteries in proper and safe place.


II. PART NAMES AND FUNCTIONS

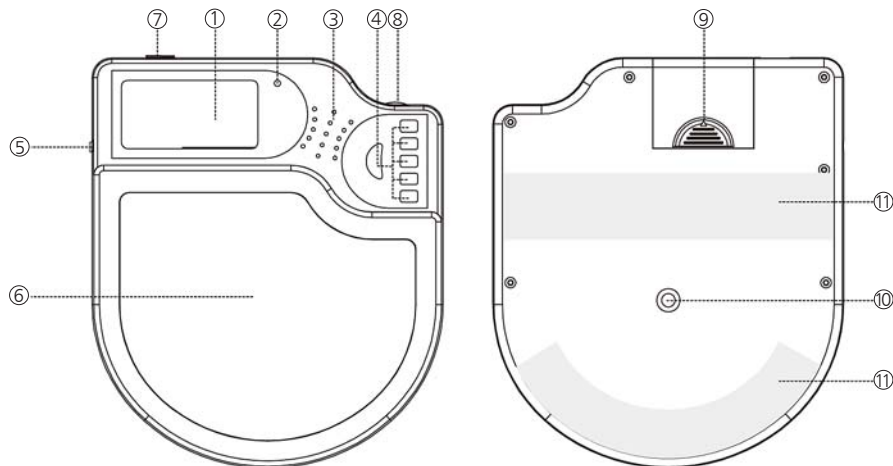

- ① LCD Screen: Displays operations.
- ② LED Light: Indicates the beats under Metronome mode.
- ③ Speaker: Makes sound under Metronome mode.
- ④ Buttons: Power on/off, operation functions.
- ⑤ Jack: For earphone.
- ⑥ Drum Pad: Striking surface.
- ⑦ Jack for DC 9V Adaptor. (not included)
- ⑧ Volume adjuster: Adjust the sound volume.
- ⑨ Battery Cabinet.
- ⑩ 8mm screw hole for music stand.
- ⑪ Anti-skid Pad: Prevents slipping.

III. REPLACE BATTERIES

Please replace the batteries according to the below drawing. Observe correct polarity (+ or -) as shown in battery holders when inserting batteries.

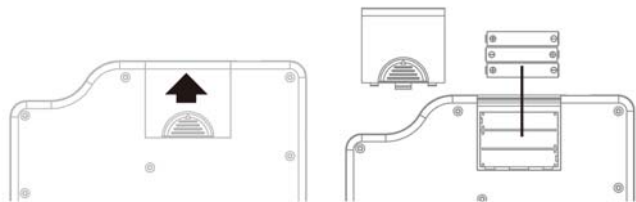

IV. HOW TO USE COUNTING

1. Press and Hold On/Off Button ⏻ to turn on. Use **MODE** Button to choose Counting Mode or to reset counting time. Press \blacktriangle and \blacktriangledown Buttons to choose desired time. The time can be set between 5 and 300 seconds.
2. Strike the drum pad to begin to count the player's pad strokes until the time runs out.
3. Press ⏻ button to reset for the next count.

V. HOW TO USE METRONOME

1. Press and Hold On/Off Button ⏻ to turn on. Use **MODE** button to choose Metronome Mode. Use \blacktriangle and \blacktriangledown to choose Tempo. Use **Rhy.** button to choose desired rhythm and **Beat** button to choose the desired beat. Use ⏻ Button to start and stop metronome.
2. If using earphones in Metronome Mode, sound will come out of earphones. If not, sound will come out of speaker in this unit.
3. When in Metronome Mode, LED Light will twinkle to the beat.

VI. HOW TO SET THE TIME

1. Press **Beat** Button for 2 seconds to enter the **Time Mode**. The left clock image ⌚ will display and the hour will start blinking. Set to the correct Hour by pressing the \blacktriangle and \blacktriangledown Buttons. To adjust the minutes, please press **Beat** Button and the Minutes will start blinking. Use \blacktriangle and \blacktriangledown Buttons to set the Minutes. Press the **Beat** Button to finish setting.

VII. HOW TO SET THE TIMER

2. Press the **Rhy.** Button to enter the **Timer Mode**. The left Timer image ⌚ will display and will start blinking. Press \blacktriangle and \blacktriangledown Button to select using timer or not. If the image shows ⌚ the timer turn is on. If the images shows ⌚ the timer is off. Press **Rhy.** Button, the Hour will start blinking. Set the Hour by pressing \blacktriangle and \blacktriangledown Buttons. Press **Rhy.** Button after setting Hour, the Minutes will start blinking, and use \blacktriangle and \blacktriangledown Buttons to set the Minutes. Press **Rhy.** Button to finish Timer setting.

VIII. SPECIFICATIONS

- | | |
|---|---|
| 1. Weight: 570g | 5. Counting: Set counting within 5 secs to 5 mins |
| 2. Dimensions: 180mm x 210mm x 29mm | 6. Time Mode: 12 hours |
| 3. Power: AAA batteries x3 or DC 9V | 7. Low Voltage Test |
| 4. Metronome: Beat: 0,1,2,3,4,5,6,7,8,9 Tempo Range: 30-250 bpm Rhythm: ♩ , ♪ , ♫ , ♬ , ♭ , ♭♭ , ♮ , ♯ , ♯♯ , ♯♯♯ , ♯♯♯♯ , ♯♯♯♯♯ , ♯♯♯♯♯♯ | 8. Gum rubber surface |
| | 9. Earphone line out |

IX. ACCESSORIES

- a. Optional AHEAD 8mm practice pad stand (part #APPS.)

For questions, visit us at www.bigbangdist.com