


Installation:

Always start by attaching to the butt side first. Keeping the snare wires evenly centered, equal distance from each side of the drum (when fully tensioned.) Make sure that the end plates are parallel with each other and not twisting, so as to not tension one side of the wires more than the other. This is very critical and will insure the highest performance and longest life. See below.

YES

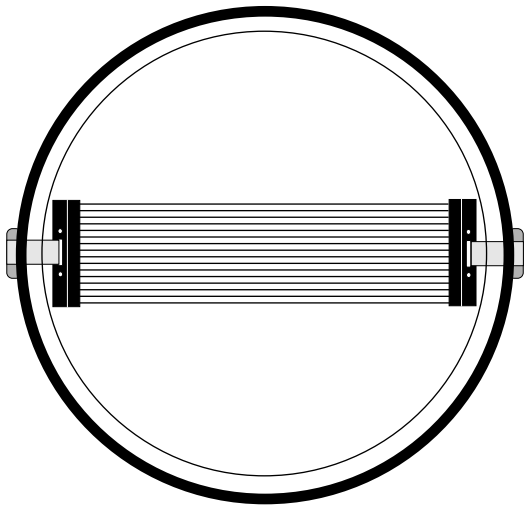

NO

